



Reaching the notes left for you

Someone has trusted you with access to private notes kept on a **Memento** — a small, offline device that safeguards those notes until the right moment. This short guide walks you through reaching the notes meant for you. There is nothing to install, no account, and no internet needed.

HOW IT WORKS, IN ONE BREATH

The notes set aside for you don't open straight away. Entering your PIN begins a *waiting period* chosen in advance by the owner. They unlock only once that time has fully passed — and only if the owner has not checked in. It's a quiet way of making sure the notes reach you exactly when they're meant to.

THE DEVICE · TWO BUTTONS

Everything is done with two buttons

On screen they're called **UPR** (the upper button) and **LWR** (the lower one). When the device is asleep it shows the Memento mark — that's normal and uses no power. Press either button to wake it.

1 Wake the device and enter your PIN

Press either button — the keypad appears. Tap **UPR** to move the highlight from key to key, and **LWR** to select each digit. When you've entered the PIN the owner gave you, press and hold **UPR** to submit (or select OK).

2 The waiting period begins

Entering your PIN the first time starts the countdown. The screen shows the time remaining, then the device sleeps to save power, waking now and then to refresh the clock. There's nothing more to do — simply wait, and keep the device charged (see overleaf).

3 When it says “*Access Ready*”

Once the countdown has finished, the screen reads **Access Ready**. Enter your same PIN once more to open the notes that were left for you.

4 Read your notes

UPR moves through the list; **LWR** opens the highlighted note. Inside a note that runs over several pages, **UPR** turns the page and **LWR** goes back to the list. When you're finished, press and hold **LWR** to put the device to sleep.

GOOD TO KNOW

Keep it charged

The countdown only advances while the device has power. If it runs flat the clock simply pauses — it never finishes early — so leave it on a charger during the wait.

Only your notes

Your PIN opens only the notes chosen for you — nothing else stored on the device is revealed.

The owner may stop it

While you're waiting, the owner can cancel the release at any time by entering their own PIN. That's expected — it simply means the notes weren't yet meant to open.

If the PIN is wrong

The screen shows *Wrong PIN* and you can try again. After several misses it waits a little longer between tries; a correct PIN clears that. It can't be locked for good.

If it has gone completely flat and won't wake

After the battery has fully drained (or been disconnected), the device may not turn on by itself when power returns. Plug it in with a USB-C cable, give it a few minutes to charge, then **press and hold LWR** to switch it back on. Nothing is lost: any waiting period that was running was simply paused while the power was off, and it resumes from where it stopped — it never completes during the gap.

QUICK BUTTON REFERENCE

ACTION	WHAT TO PRESS
Wake the device	Either button
Move / next	UPR – single click
Move back / previous	UPR – double-click
Select / open / enter a digit	LWR – single click
Submit the PIN / go back	UPR – press & hold
Put the device to sleep	LWR – press & hold
Open the on-screen Help	LWR – double-click

Need the controls while you're using it? A double-click of LWR opens the Help guide on the device at any time.